

## TRUE UNIVERSAL 4-IN-1 CHARGING STAND QUICK START GUIDE




### Wirelessly charge your phone

1. Attach charging stand to pad with shelf facing front. Back has power input and USB-C Port.
2. Plug AC adapter into wall & insert cable to power input.
3. Choose landscape or portrait position. See **“Adjusting the shelf”** section below.

- Landscape is suggested for Netflix, HBO Max, Hulu and other streaming services.
- Portrait for texting, FaceTime, TikTok and other apps of your choice.

**Note:** You must center phone directly over the charging coil as shown:

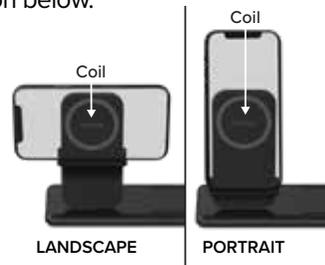


### Adjusting the shelf



1. Flip shelf to up position
2. Adjust shelf up or down
3. Flip shelf down to lock in place


### Wirelessly charge a 2nd device

The 4-in-1 Charger is designed with a 5W charging pad to wirelessly charge a second device. You can charge earbuds or even another phone as you stream your favorite shows.

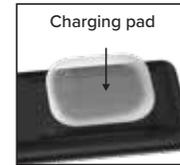

### Wirelessly charge Apple Watch

1. Remove base cover to access watch stand stored in cord management area.
2. Using your own supplied cord, feed through hole in watch stand, snap dongle into place charging side up.
3. Pinch tabs on watch stand and insert into slot on right side of charging pad.
4. Flip over. Push cord into deepest groove of race track and thread from inside to outside track as shown to plug into USB IN . Replace cover.

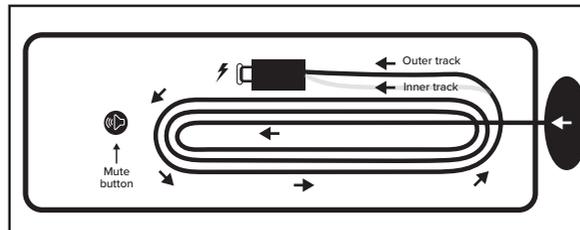

Wrap Apple Watch cord in racetrack as shown

### Charging a 4th device

The 4-in-1 Charger is designed with a high-speed 20W USB-C port to charge a fourth device with your own supplied charging cable. Whether its another phone, tablet, earbuds, headphones or e-reader the 4-in-1 charges all of your favorite devices.

### Audible tones

The True Universal 4-in-1 Charger was designed to tell you 2 important things:

1. When your phone is properly placed and charging is initiated, you will hear an **“up”** tone. When you remove your phone from the Charger you will hear a **“down”** tone.
2. If you did not place your phone correctly over the charging coil, the Charger will say the word **“realign”**, indicating that you need to reposition your phone more accurately. To reposition, you will need to either adjust your phone side to side or adjust the shelf up or down. It may only require a very slight adjustment for correct placement.

**Note:** We recommend to keep the audible tone ON to ensure that your phone is charging. However, If no tone or voice is preferred, press the MUTE button on the bottom of stand.

### LED charging lights

When your phone is charging, the Charger LEDs will turn ON temporarily for 10 seconds and then turn OFF. This is in order to keep your room dark at night. LEDs will blink when phone is not centered or not charging.



For **FULL** user manual and more information, scan the QR code with your smartphone camera or go to: **support.mycharge.com**