

IN THIS PACKAGE:

- **ADVENTURE JUMP START** powerbank
- Jumper cables • Recharge cable • Quickstart guide

CHARGING ADVENTURE JUMP START


Connect the included recharging cable to any USB power source. Fully charged unit shows 4 solid, non-blinking LEDs.

3 ways to recharge: From wall outlet, car, computer




PRODUCT OVERVIEW

- Detachable jumper cables
- Cable LED
- Micro-USB input
- LED flashlight
- USB port
- Power button

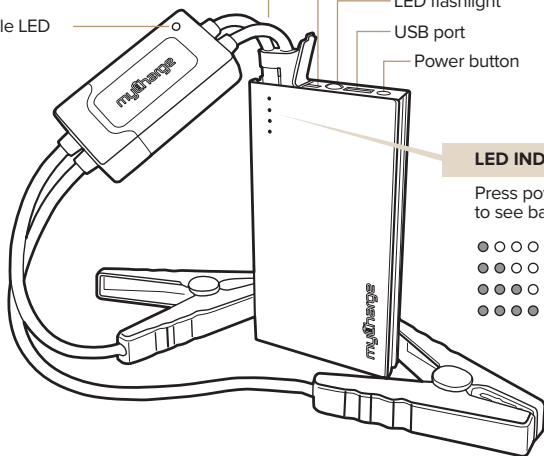

LED INDICATORS

 Press power button to see battery level



LED FLASHLIGHT & SOS

Press and hold **power button** to turn on **LED flashlight**—then a quick press to make LED flash, then a quick press again to turn on the SOS. Press and hold power button to turn off.

JUMP-STARTING YOUR VEHICLE

1. Make sure powerbank capacity shows at least 3 solid LEDs.
2. Connect cable to powerbank.
3. Clamp the **red cable** to the **positive (+)** post on your vehicle's battery. Next, clamp the black cable to the negative (-) post. **Do not clamp both at the same time.**
4. The **cable LED** should be solid GREEN*. Proceed to crank your vehicle.
5. If after 3 seconds your vehicle doesn't start, stop cranking. Remove cables from battery; wait 60 seconds and try again.
6. Once you have successfully started your vehicle, remove the jumper cables, beginning with black.

* If LED is solid red, disconnect from vehicle battery, then disconnect and reconnect jumper cable from powerbank.

CHARGING DEVICES

Using integrated cable:

Pull out Micro-USB cable from bottom of powerbank and plug into any compliant device.

*Your device should begin charging automatically—if not, press **power button**.*

Using USB port:

Using your own cable, plug the USB end into powerbank and the other end into your device.

*Your device should begin charging automatically—if not, press **power button**.*



WARRANTY INFORMATION: At myCharge, we're dedicated to making the highest quality products possible. In that, we provide a one-year limited warranty from the date of purchase. Keep a copy of your receipt as proof of purchase and register your product at mycharge.com and check for the latest product updates as they develop. Failure to register your product and/or to provide proof of purchase may void the warranty.

Warranty Instructions and Information visit: mycharge.com/warranty and select your model.

MYCHARGE SUPPORT: support.mycharge.com

WARNING: Read all instructions and warnings prior to using this product. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which myCharge is not responsible.

1. Do not expose battery to heat sources, extended direct sunlight or other high-temperature environments.
2. Avoid drops and excessive impacts to the battery.
3. Do not disassemble, attempt to repair or replace any part of the housing or battery.
4. Do not attempt to charge the battery using any other method, apparatus, or connections other than the device's charging cable.
5. Never dispose of batteries in the garbage. This is unlawful under state and federal environmental laws and regulations. Always take used batteries to a local battery-recycling center.
6. **WARNING:** This product contains chemicals known to the state of California to cause cancer, birth defects and other reproductive harm.

FCC COMPLIANCE: Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by myCharge could void the user's authority to operate this equipment.

myCharge is a registered trademark of RFA Brands, LLC. © 2017 myCharge. All Rights Reserved.

P166KR-A

